

Makrolon® 2558

PC

Covestro Deutschland AG

- MVR (300 °C/1.2 kg) 14 cm³/10 min
- medical devices
- suitable for ETO and steam sterilization at 121 °C
- biocompatible according to many ISO 10993-1 test requirements
- medium viscosity
- easy release

Rheological properties	Value	Unit	Test Standard
ISO Data			
Melt volume-flow rate, MVR	14	cm³/10min	ISO 1133
Temperature	300	°C	-
Load	1.2	kg	-
Molding shrinkage, parallel	0.7	%	ISO 294-4, 2577
Molding shrinkage, normal	0.7	%	ISO 294-4, 2577

Mechanical Properties	Value	Unit	Test Standard
ISO Data			
Tensile Modulus	2400	MPa	ISO 527
Yield stress	66	MPa	ISO 527
Yield strain	6.1	%	ISO 527
Nominal strain at break	>50	%	ISO 527
Tensile Creep Modulus, 1h	2200	MPa	ISO 899-1
Tensile Creep Modulus, 1000h	1900	MPa	ISO 899-1
Impact Strength (Charpy), +23°C	no break	kJ/m²	ISO 179/1eU
Impact Strength (Charpy), -30°C	no break	kJ/m²	ISO 179/1eU
Puncture - maximum force, +23°C	5400	N	ISO 6603-2
Puncture - maximum force, -30°C	6300	N	ISO 6603-2
Puncture energy, +23°C	60	J	ISO 6603-2
Puncture energy, -30°C	65	J	ISO 6603-2

Thermal Properties	Value	Unit	Test Standard
ISO Data			
Glass Transition Temperature (10°C/min)	144	°C	ISO 11357-1/-2
Temp. of deflection under load (1.80 MPa)	124	°C	ISO 75-1/-2
Temp. of deflection under load (0.45 MPa)	136	°C	ISO 75-1/-2
Vicat softening temperature, 50°C/h 50N	144	°C	ISO 306
Coeff. of Linear Therm. Expansion, parallel	65	E-6/K	ISO 11359-1/-2
Coeff. of Linear Therm. Expansion, normal	65	E-6/K	ISO 11359-1/-2
Oxygen index	28	%	ISO 4589-1/-2

Electrical Properties	Value	Unit	Test Standard
ISO Data			
Relative permittivity, 100Hz	3.1	-	IEC 62631-2-1
Relative permittivity, 1MHz	3	-	IEC 62631-2-1
Dissipation Factor, 100Hz	5	E-4	IEC 62631-2-1
Dissipation Factor, 1MHz	90	E-4	IEC 62631-2-1
Volume Resistivity	>1E13	Ohm*m	IEC 62631-3-1
Surface Resistivity	>1E15	Ohm	IEC 62631-3-2
Electric Strength	34	kV/mm	IEC 60243-1
Comparative tracking index	250	-	IEC 60112

Other Properties	Value	Unit	Test Standard
ISO Data			
Water Absorption	0.3	%	Sim. to ISO 62
Humidity absorption	0.12	%	Sim. to ISO 62
Density	1200	kg/m³	ISO 1183


Material Specific Properties	Value	Unit	Test Standard
ISO Data			
Luminous transmittance	89	%	ISO 13468-1, -2

Test specimen production	Value	Unit	Test Standard
ISO Data			
Injection Molding, melt temperature	290	°C	ISO 294
Injection Molding, mold temperature	80	°C	ISO 294
Injection Molding, injection velocity	200	mm/s	ISO 294


Processing Recommendation Injection Molding	Value	Unit	Test Standard
Pre-drying - Temperature	120	°C	-
Pre-drying - Time	2 - 3	h	-
Processing humidity	≤0.02	%	-
Melt temperature	280 - 320	°C	-
Mold temperature	80 - 100	°C	-

Diagrams


Viscosity-shear rate

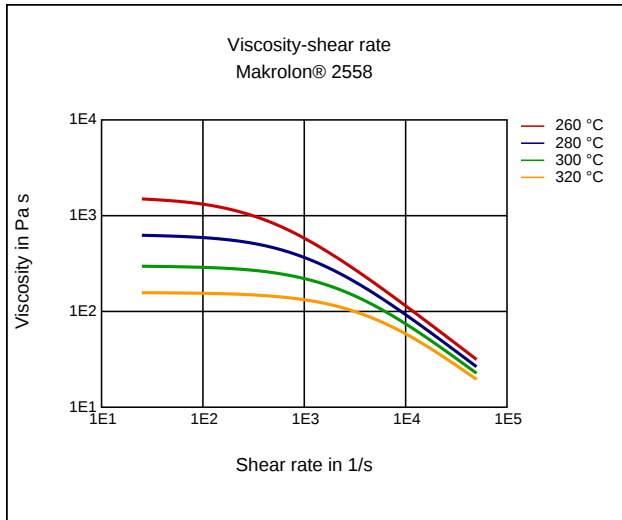


Shearstress-shear rate

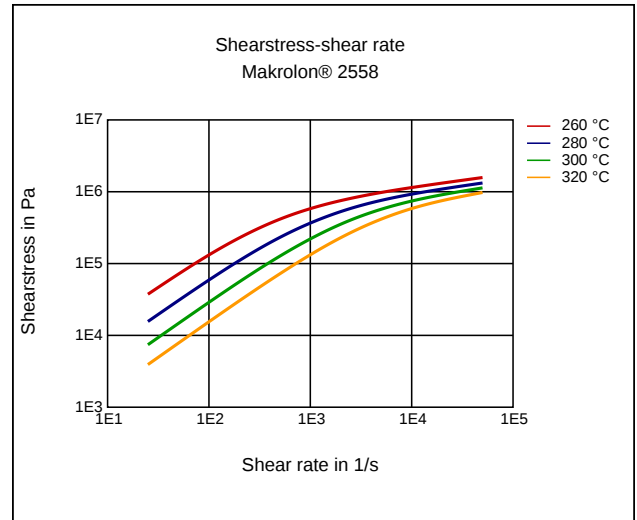


Dynamic Shear modulus-temperature

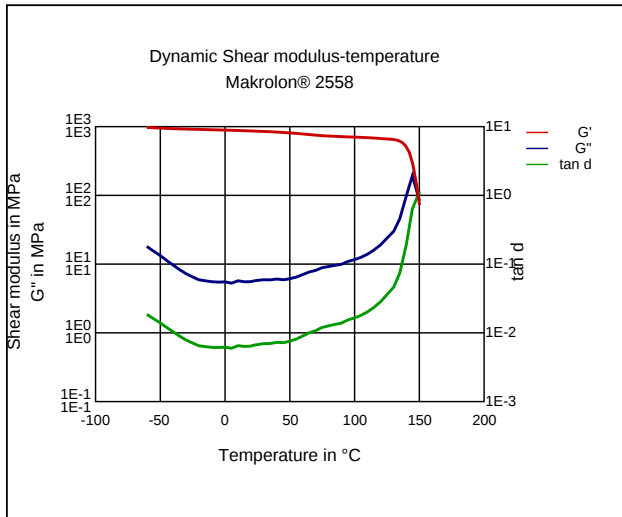


Stress-strain

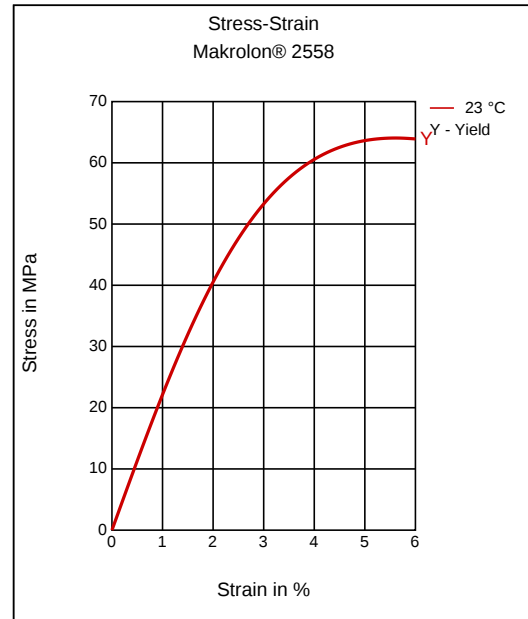


Secant modulus-strain

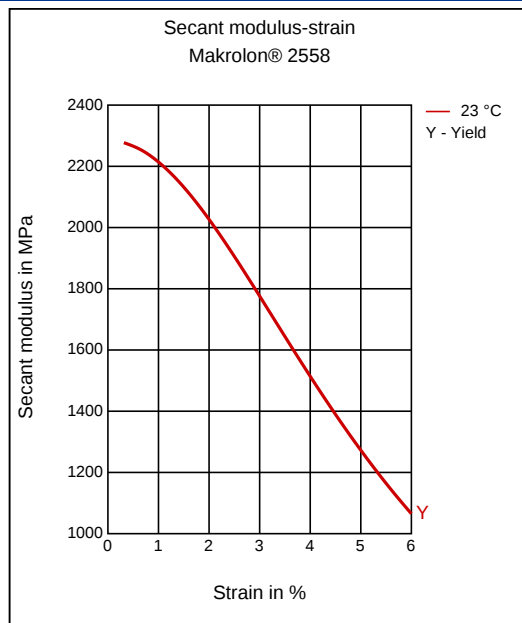


Stress-strain (isochronous) 23 °C

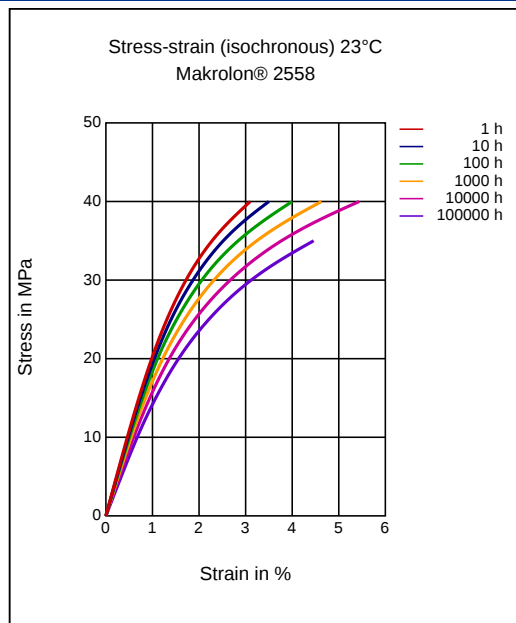


Creep modulus-time 23 °C

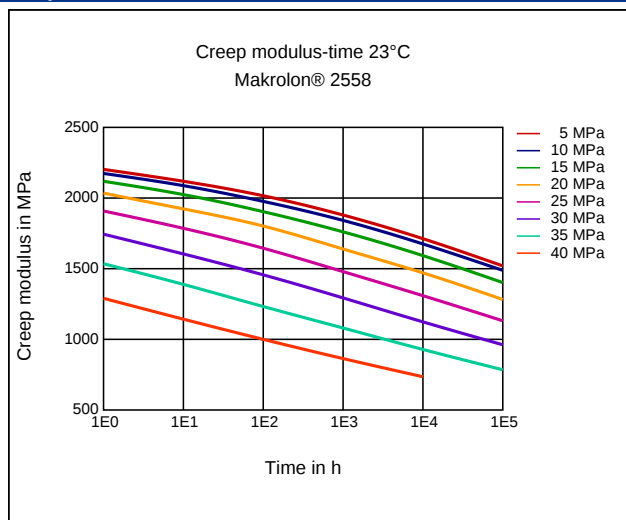


Stress-strain (isochronous) 40 °C

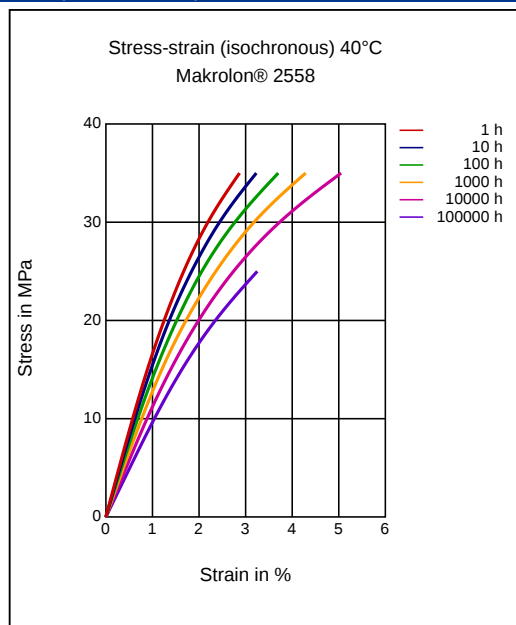


Creep modulus-time 40 °C

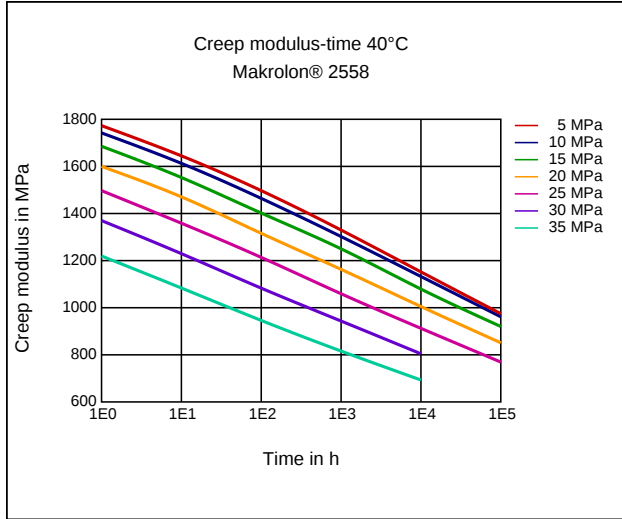


Stress-strain (isochronous) 60 °C

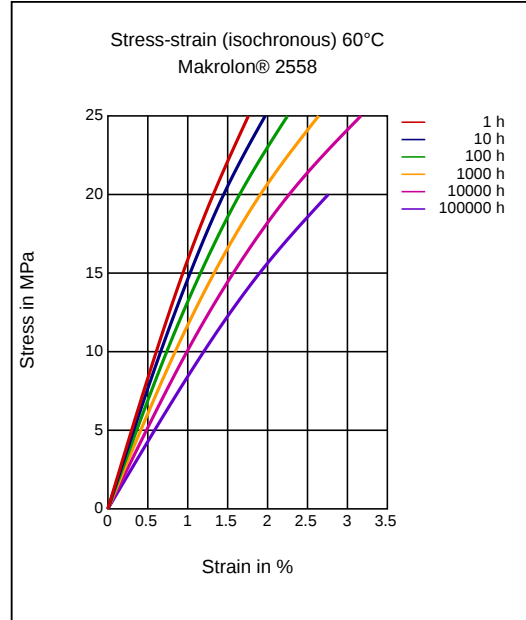


Creep modulus-time 60 °C

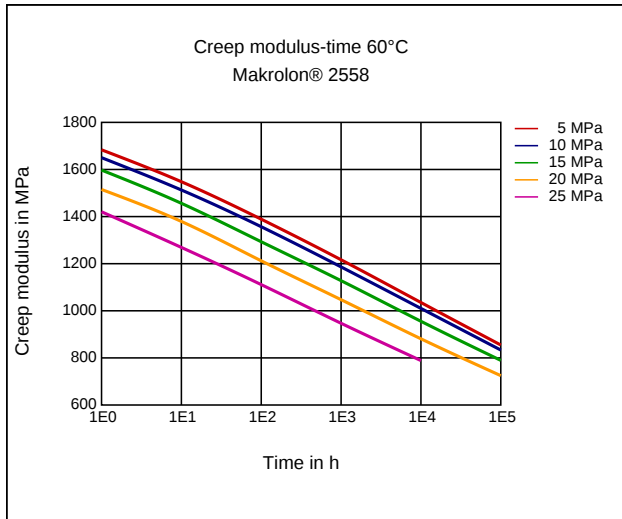


Stress-strain (isochronous) 90 °C

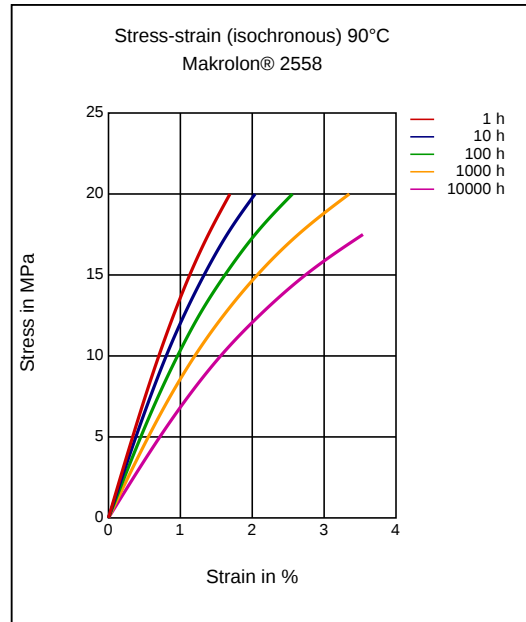


Creep modulus-time 90 °C

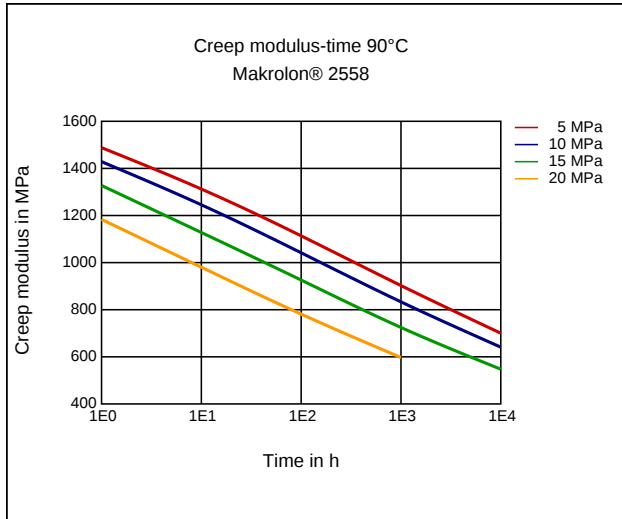


Stress-strain (isochronous) 120 °C

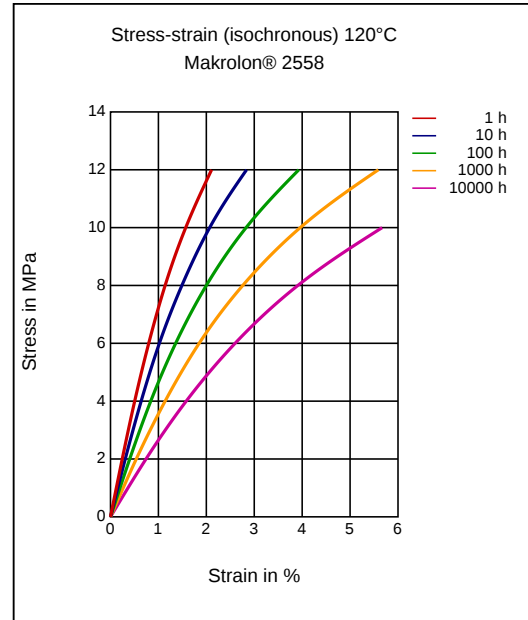

Creep modulus-time 120 °C

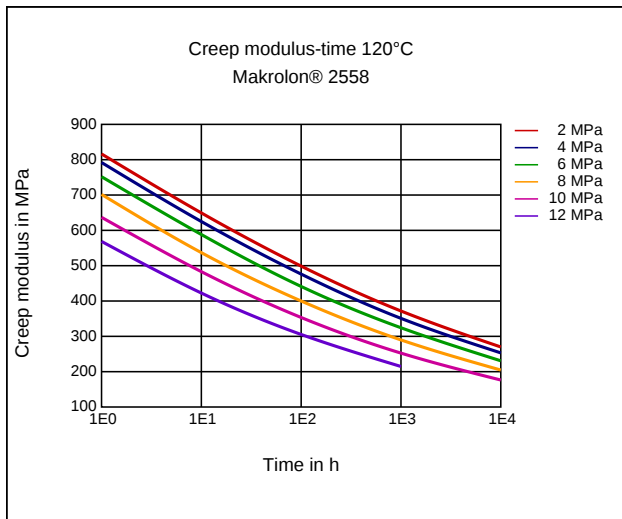

Specific volume-temperature (pvT)

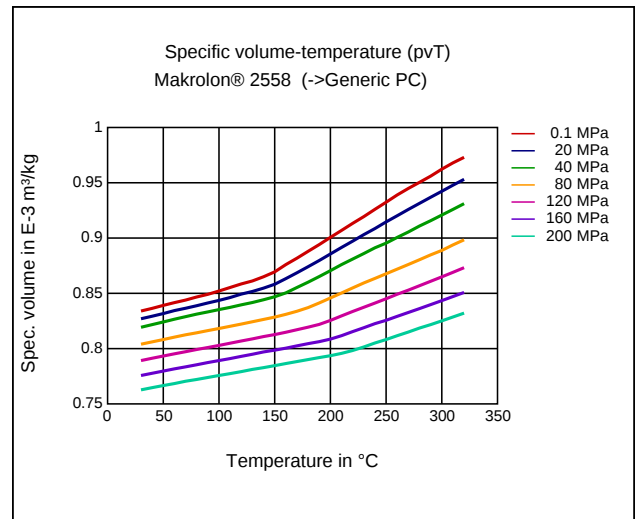

Characteristics

Processing

Injection Molding

Delivery form

Pellets

Additives

Release agent

Special Characteristics

Transparent, Opaque, Sterilizable, Ethylene Oxide (EtO)
Sterilization, Steam sterilization, Gamma irradiation sterilization

Certifications

Medical, Biocompatibility ISO 10993, US Pharmacopeia Class VI
Approved

Applications

Medical

Injection Molding

PREPROCESSING

Max. Water content: 0.01 - 0.02 %
Drying temperature: 120 °C
Drying time:
Circulating air drying oven (50 % fresh air) 4-8 h
Fresh air dryer (high speed dryer) 2-4 h
Dry air dryer 2-3 h

PROCESSING

Melt temperature: 280-320 °C
Mold temperature: 80-100 °C

Use open nozzle.

Disclaimer

Liability Exclusion

These guide values are measured and provided by the product manufacturer and have been determined on standardised test specimens and can be affected by pigmentation, mould design and processing conditions. M-Base has taken the guide values from the producer's original Technical Data Sheet. **ALBIS AND M-BASE ARE THEREFORE NOT RESPONSIBLE FOR THE ACCURACY OF THE GUIDE VALUES AND CANNOT GIVE ANY WARRANTY WITH REGARD TO THEIR CORRECTNESS.**

Any information given on the chemical and physical characteristics of our products, including, without limitation, technical advice on applications, whether verbally, in writing or by testing the product, is given to the best of our knowledge and in good faith and does not exempt the buyer from carrying out their own investigations and tests in order to ascertain the product's specific suitability for the purpose intended.

The buyer is solely responsible for confirming the suitability of the product for a particular application, its utilization and processing and must observe any applicable laws and government regulations. **NO EXPRESS OR IMPLIED RECOMMENDATION OR WARRANTY IS GIVEN WITH REGARD TO THE SUITABILITY OF THE PRODUCT FOR A PARTICULAR APPLICATION, SUCH AS, BUT NOT LIMITED TO, SAFETY-CRITICAL COMPONENTS OR SYSTEMS.**

Healthcare uses: the supply of any product by ALBIS for any medical, pharmaceutical or diagnostic application is conditional to an assessment by ALBIS in terms of compliance with ALBIS' internal risk management policy – even for products which are in general designated for use in Healthcare applications.

Important: irrespective of product type or designation, ALBIS does not recommend or support the use of any products it supplies which fall into the following medical, pharmaceutical or diagnostic application categories:

- risk class III applications according to EU directive 93/42/EEC
- any bodily implant application for greater than 30 days
- any critical component in any medical device that supports or sustains human life.

At all times, our standard terms and conditions of sale apply.