

DuPont Performance Materials

A broad range of advanced solutions for
healthcare components



DuPont Performance Materials delivers science-based, high quality thermoplastics to the healthcare industry.

These thermoplastics are used in the manufacture of demanding components across many different healthcare segments.

DuPont draws on its long experience in materials research, application development, technology, safety and regulatory compliance to provide expert support to healthcare product manufacturers, backed by its global manufacturing and supply strength.


Depending on the specific application, DuPont can deliver an appropriate solution from its broad range of standard products, or from its portfolio of “Special Control” (SC) and “Premium Control” (PC) grades, which are differentiated by a greater degree of testing, manufacturing control and regulatory support.

The key properties our materials can offer your products

High strength

First and foremost, designers are looking for an optimum balance of strength, stiffness and toughness with excellent molding characteristics. The right balance of these properties is the key to designing components for maximum reliability, safety and manufacturability. DuPont™ Delrin® POM, having the most metal-like behavior of any unreinforced plastic due to its very high crystallinity, is often the first choice for designers. DuPont also offers a wide range of reinforced engineering plastics for applications requiring even higher stiffness, strength and creep resistance (Figure 1).

Figure 1: Strength and Stiffness*

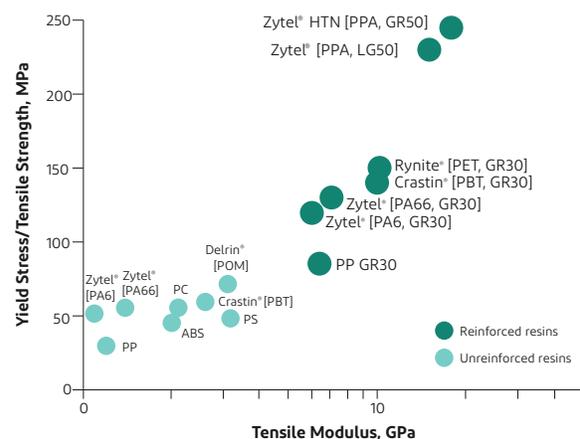

*Zytel® conditioned to 50% RH




Low friction

The selection of appropriate materials in a tribological system (whenever two surfaces rub against each other) is vital to ensure predictable performance and to avoid excessive or variable friction, stick-slip effects, squeaking or eventual total failure.

Secondary lubricants can address these issues but generally tend to be avoided by medical device manufacturers as they require added controls for quantity and placement, contamination control and add one more variable in manufacturing.

DuPont Performance Materials has extensive experience in product development and testing for low wear and friction applications across many industries and offers several grades for medical device manufacturers (Figure 2).

Figure 2: Typical Dynamic Coefficient of Friction*

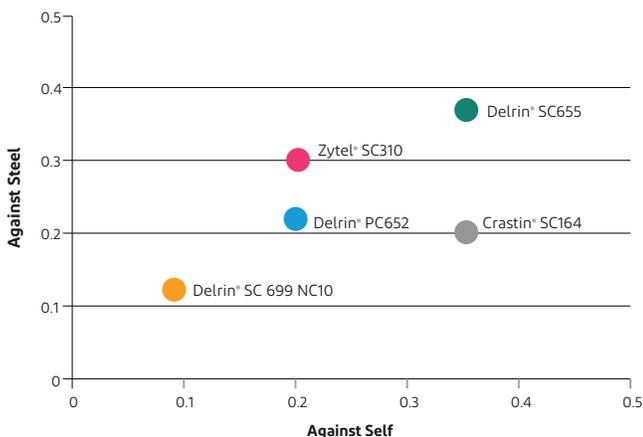

*Dynamic coefficient of friction values can be impacted by load, speed surface roughness, etc.


Flexibility

For applications requiring maximum flexibility, DuPont™ Hytrel® —a plasticizer-free thermoplastic polyester elastomer (TPC-ET)—is an innovative solution.

Hytrel® is super-resilient, providing excellent flex fatigue resistance and spring-like properties, and can be used over a wide range of temperatures while still retaining its flexibility and mechanical properties. It enables the design of a variety of parts and products that combine the best features of both high-performance rubbers and flexible plastic materials.

Available in the range of 30 to 82 Shore D hardnesses, Hytrel® is also economical to process, using a variety of molding or extruding technologies (Figure 3).

Figure 3: Flexibility

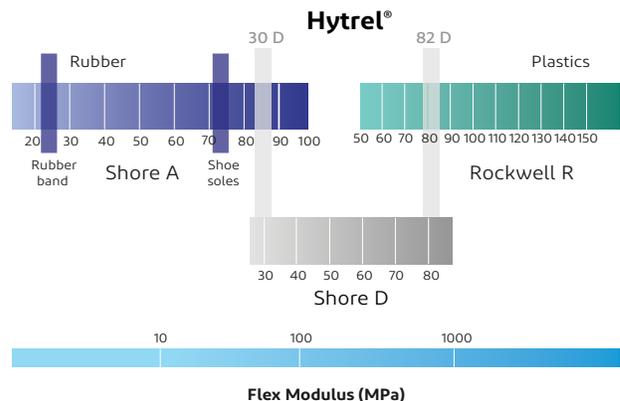


Chemical resistance

One of the outstanding properties of semi-crystalline versus amorphous plastics is their resistance to many chemicals, which provides a major benefit in today's healthcare industry where a wide range of substances is used for analysis, cleaning and disinfection, or as a drug carrier or conserving agent.

Since factors such as temperature, chemical concentration, exposure time, part surface to weight ratio and the plastic component's stress level can all affect performance, it is highly recommended that a realistic end-use test be run to determine the suitability of a polymer grade in a particular application (Figure 4).

Figure 4: Chemical Resistance – Hospital Environment

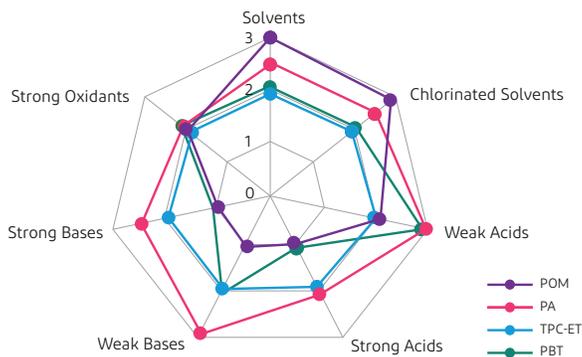

100 Hours total exposure time.
TPC-ET Solvent resistance is highly dependent on type of solvent and grade of Hytrel®
Chemical Resistance Ranking:

- 0: Not resistant
- 1: Only very short term (5-10 min) resistance
- 2: Good resistance, either slight swell or limited to ambient temperature
- 3: Excellent resistance, no swell, also at elevated temperature

Barrier properties

Customers have sought solutions which protect healthcare personnel from patients' viruses and projections of bodily fluids (blood). They require materials that provide protection but should not prevent the evaporation and evacuation of sweat moisture. Unlike microporous structures, polymeric monolithic membranes made in Hytrel® specialty resins have no pores that can become clogged, and can provide excellent water vapor transmission for increased "wear" comfort as part of medical gown multi-layer structure.



Sterilization resistance

Sterilization is a vital day-to-day procedure in the healthcare sector, both for single-use and multiple-use devices, so it is important that materials used in medical components are not affected by this process.

The broad range of materials offered by DuPont Performance Materials provides a suitable solution for nearly every sterilization approach as noted in the table below. This allows manufacturers to select the best material for their specific application requirements (Table 1).

Table 1: DuPont Performance Materials Resistance to Sterilization

Product	Sterilization process*				
	Autoclave <25 Cycles	Autoclave 25 - 100 Cycles	Gamma 1 Cycle	E-Beam 1 Cycle	EtO 1 Cycle
DuPont™ Zytel® PA66	1	1	1	1	●
DuPont™ Zytel® PA612	1	1	●	1	●
DuPont™ Delrin® POM	●		●	●	●
DuPont™ Hytrel® TPC-ET (from 30 to 82 Shore D)	2 ●	2 ●	●	●	●
DuPont™ Crastin® PBT	● ●		●	●	●

● Appropriate | ● Limited | ● Not Recommended | 1 - Yellowing | 2 - Softer Grades

* Steam: Ultrasonic wash at 87°C + 3 min at 134°C, Gamma: 40 kGy, E-Beam: 50 kGy, EtO: 50°C, 2 hr exp.



DuPont Performance Materials – typical properties of “SC” and “PC” grades

These products are manufactured according to Good Manufacturing Practice (GMP) principles and generally accepted in food contact applications in Europe** and the USA when meeting applicable use conditions. These products are also tested against ISO 10993-5 and -11 and selected parts of USP Class VI. For details, individual compliance statements are available from

your DuPont representative. Table 2 is a condensed version. For a complete data sheet, please contact your DuPont representative.

The data contained herein reflects typical historical properties for our products and should not be used to establish specification limits.

Table 2: Special Control and Premium Control Grades for Healthcare Applications

Property	Tensile	Yield Stress	Yield Strain	Strain at Break	Charpy Impact (notched)		Density	Mass Flow Rate	Temperature of Deflection under Load	Vicat Softening Temperature	Melt Temperature	
	(Mpa)	(Mpa)	(%)	(%)	(kJ/m ²)	(kJ/m ²)						(g/cm ³)
Test Condition	23°C	23°C	23°C	23°C	23°C	-30°C		2.16 kg	1.8 MPa	10N, 50°C/h	10°C/min	
Test Standard	ISO 527 -1/-2	ISO 527 -1/-2	ISO 527 -1/-2	ISO 527 -1/-2	ISO 179/1eA	ISO 179/1eA	ISO 1183	ISO 1133	ISO 75 -1/-2	ISO 306	ISO 11357 -1/-3	
Product Family	Grade (Natural Color)	Description										
Hytrel® TPC-ET	PC938	30D durometer	24	1.8 (at 10% strain)	>300	No break	No break	1.07	5		80	177
	PC945**	40D durometer	60	4.6 (at 10% strain)	>300	No break	No break	1.16	5.6		109	152
	PC952	55D durometer	190		>300	N	-150(P)	1.190	18	45	180	203
	SC956**/ PC956**	55D durometer	180	11 (at 10% strain)	>300	No break	145(p)	1.19	8		180	201
	PC966**	63D durometer	280	15 (at 10% strain)	>300	120(P)	25	1.22	9		195	210
	SC969	63D durometer	260	15 (at 10% strain)	>300	120(P)	25	1.22	9		195	211
	SC976**	72D durometer	525	23 (at 10% strain)	>300	33	10	1.26	12.5		205	218
	SC988**	82D durometer	1180	34 (at 10% strain)	>300	15	5	1.28	12.5		213	221
Delrin® POM¹	SC631	Low/medium flow	3300	74	15	35	9	8	1.42	7	103	178
	PC650	Medium flow	3100	71	17	30	9	8	1.42	15	95	178
	PC652	Medium flow, advanced lubricant	3000	65	11	23	7	6	1.39	14	97	178
	SC655	Medium flow	3100	71	17	30	9	8	1.42	15	95	178
	SC690/PC690	High flow	3300	71	12	23	8	7	1.42	25	94	178
	PC691	High flow, nucleated	3400	71	9	22	7	6.5	1.41	24	105	178
	SC698	High flow, low friction, superior surface	3100	65	11		4	4	1.44	21	97	178
	PC699	High flow; silicone filled for low wear/friction	3100	63	15	30	6.5	7.5	1.4	25	100	178
Zytel® nylon	SC310/PC310	High flow PA66	1400*	55*	25*	>50*	15*	3*	1.14		70	262
	SC315	High flow PA612	1700*	54*	18*	>50*	4*	3*	1.06		62	218
Crastin® PBT	SC164/PC164	High flow	2400	55	4	30	4	4	1.31	33	50	223
	SC169	Superior flow, low friction	2500	50	3.5	15	3		1290	46	50	224
	SC193	30% glass reinforced, low warp	9500	130 (at break)		2.5	10	9	1.44		180	225

¹Homopolymer

(P) Partial break

* Conditioned values for Zytel® (to 50% RH)

** Identified grades of Hytrel® do not have food contact support in Europe

Contact DuPont for material Safety Data Sheet, general guides and/or additional information about ventilation, handling, purging, drying, etc. ISO mechanical properties measured at 4 mm and all ASTM properties measured at 3.2 mm.

Special Control* Grades

- Manufacturing according to GMP principles
- Food contact statements (EU/FDA)[†]
- Testing against selected parts USP Class VI
- Testing against relevant parts ISO 10993
- Sterilization data
- Global availability

Products

- Hytrel® SC956 NC010, 55 Shore D hardness
- Hytrel® SC969 NC010, 63 Shore D hardness
- Hytrel® SC976 NC010, 72 Shore D hardness
- Hytrel® SC988 NC010, 82 Shore D hardness
- Delrin® SC631 NC010, medium flow, nucleated, POM homopolymer
- Delrin® SC655 NC010, medium flow POM homopolymer
- Delrin® SC690 NC010, high flow POM homopolymer
- Delrin SC698 NC010, high flow, lubricated POM homopolymer for superior surface quality
- Zytel® SC310 NC010, high flow PA66
- Zytel® SC315 NC010, high flow PA6/12
- Crastin® SC164 NC010, high flow PBT
- Crastin SC169 NC010, high flow, highly lubricated, PBT
- Crastin® SC193 NC010, 30% glass reinforced, lower warpage, PBT

Hytrel®: plasticizer free thermoplastic polyester elastomer

* DuPont reserves the right not to sell Special Control and Premium Control products for selected applications.

[†] Some Hytrel® grades may not have EU food contact statements, please check with your DuPont representative.

[‡] Contains silicone oil for enhanced frictional/wear performance.

Premium Control* Grades

- Manufacturing according to GMP principles
- Food contact statements (EU/FDA)[†]
- Testing against selected parts of USP Class VI
- Testing against relevant parts of ISO 10993
- Sterilization data
- Global availability
- FDA drug master files available (DMF)
- Extended change notification

Products

- Hytrel® PC938 NC010, 30 Shore D hardness
- Hytrel® PC945 NC010, 40 Shore D hardness
- Hytrel® PC952 NC010, 55 Shore D hardness
- Hytrel® PC956 NC010, 55 Shore D hardness
- Hytrel® PC966 NC010, 63 Shore D hardness
- Delrin® PC650 NC010, medium flow POM homopolymer
- Delrin® PC652 NC010, medium flow, lubricated, POM homopolymer
- Delrin® PC690 NC010, high flow POM homopolymer
- Delrin® PC691 NC010, high flow, nucleated, POM homopolymer
- Delrin® PC699 NC010, high flow lubricated[‡], POM homopolymer
- Zytel® PC310 NC010, high flow PA66
- Crastin® PC164 NC010, high flow PBT

Customer Applications of DuPont Performance Materials:

- | | | |
|-------------------------------|--------------------------|---------------|
| • Valves and Pumps | • Pen Injectors | • Diagnostics |
| • Dry Powder Inhalers | • Surgical Instruments | • Wound Care |
| • Safety Devices for Syringes | • Fluid and Gas Handling | • Prosthetic |



To learn more about DuPont's
healthcare solutions visit:

<https://www.dupont.com/mobility-materials/consumer.html>

DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with ™, SM or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted. © 2022 DuPont.

The information set forth herein is furnished free of charge and is based on technical data that DuPont believes to be reliable and falls within the normal range of properties. It is intended for use by persons having technical skill, at their own discretion and risk. This data should not be used to establish specification limits nor used alone as the basis of design. Handling precaution information is given with the understanding that those using it will satisfy themselves that their particular conditions of use present no health or safety hazards. Since conditions of product use and disposal are outside our control, we make no warranties, express or implied, and assume no liability in connection with any use of this information. As with any product, evaluation under end-use conditions prior to specification is essential. Nothing herein is to be taken as a license to operate or a recommendation to infringe on patents.